

# Limited Warranty

## ILIFT MASSAGE LOUNGER

### Consumer Limited Warranty: ONE-YEAR WARRANTY

This warranty guarantees that the product purchased is to be free from defects in material and workmanship under normal usage and local voltage for a period of one year. This warranty expires in TWO (2) years on parts, and ONE (1) year on labor after the date of purchase.

U.S. Jaclean, Inc. (referred to as "the Warrantor") will repair this product with new or rebuilt parts in case of defects in material or workmanship, free of charge, in the USA provided that:

- 1) The product is operated in accordance with the printed instructions supplied.
- 2) The product is used under normal conditions for which designed.
- 3) The product is not subjected to misuse, negligence, or accident.
- 4) The product receives proper care, protection, and maintenance.

This warranty is extended to the original end-user when purchased from an authorized U.S. Jaclean, Inc. distributor. A purchase receipt or other proof of date of the original purchase is required for service and parts replacement under this warranty. This warranty does not cover shipping charges for defective items if a claim is made more than 30 days after the date of purchase.

This warranty only covers failures due to defects in materials and workmanship, and does not cover normal wear or cosmetic damages. This warranty does not cover damages which occur in shipment, or failures which result from: accident, misuse (including, without limitation, failure to comply with instructions and use limitations contained in the Operating Instructions), abuse, neglect, mishandling, faulty installation, set-up adjustments, improper operation or maintenance, alteration, modification, power line surge, lightening, improper line voltage, commercial use such as hotel, office, restaurant, or other business or rental use of product, service by anyone other than from U.S. Jaclean, Inc., or damage that is attributable to "acts of God." Continued use of this product after discovering a defect voids this warranty. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

**IMPORTANT: DO NOT** return defective product to the store.  
Contact U.S. Jaclean, Inc. for repair services.

Please retain this Warranty Certificate, together with the original purchase receipt, and present it to our technician for inspection during service.  
For assistance and more information, please contact U.S. Jaclean, Inc.  
Online warranty registration at: [daiwamassage.com](http://daiwamassage.com)



## i·LIFT MASSAGE LOUNGER



# OPERATING INSTRUCTIONS

# ILT-1



Distributed by U.S. Jaclean, Inc.  
Gardena, CA 90249

**1-833-542-1918**  
9AM - 5PM PST (Monday - Friday)  
[daiwamassage.com](http://daiwamassage.com)

## **ILIFT MASSAGE LOUNGER**

---

Thank you for purchasing the iLift Massage Lounger.

Before using this chair for the first time, please read through all sections of this user manual carefully, paying special attention to the Safety Instructions.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.

## **CONTENTS**

---

IMPORTANT SAFETY PRECAUTIONS.....	1
PARTS .....	3
MASSAGE CHAIR OPERATION .....	4
Armrest Controller .....	4
Armrest Controller Operation .....	5
Main Controller .....	6
Main Controller Operation .....	7
FUNCTIONS AND FEATURES.....	15
SETUP .....	16
Installation .....	16
Massage Chair Placement .....	16
Move Method .....	16
Before Using the Chair the First Time.....	18
PRODUCT STORAGE AND MAINTENANCE .....	19
TROUBLESHOOTING.....	20
TECHNICAL SPECIFICATIONS.....	20
LIMITED WARRANTY.....	21

## ▶ IMPORTANT SAFETY PRECAUTIONS

### ⚠ WARNING

⊘	Do not use a power supply outside the rated voltage to avoid electric shock or malfunction.
	If the power cord and plug are damaged or the power socket is loose, it should be stopped immediately to avoid electric shock or short circuit.
	In order to avoid accidents, machine should not be used by anyone who can not express themselves or independently operate the machine.
	Do not allow children below 14 years old to use or play on it, and do not sit or stand on the backrest, armrest, or legrest.
	The power cord must remain intact and should not be damaged, modified, twisted, stretched, knotted, or subjected to excessive pressure—especially under the machine—as this could lead to short circuits or electric shock.
⚡	Do not place in damp places such as bathrooms to avoid electric shock, malfunctions, and rust.

### ⚠ ATTENTION

!	Each program has a default usage time of 15 minutes. If you need to adjust the duration, you can do so using the timer settings. It is recommended not to massage the same area for more than 5 minutes to avoid muscle soreness. Additionally, total daily usage should be limited to 30 minutes.
	If there are any bodily abnormalities or sensations during use, please stop using immediately.
	Confirm whether the operation switch and reset function are working properly to avoid accidents or injuries.
⚡	After extended use, ensure the massage chair is functioning properly before using it again.
	When there is a power outage, the power should be immediately cut off and the power plug should be unplugged from the power socket to avoid accidents.
⊘	When not in use, unplug the power plug from the power socket and place the plug at least 12 inches above the ground to avoid dust and moisture.
	When massaging the arms, hard objects such as watches and jewelry should be removed to avoid accidents or injuries.
	Do not fall asleep during use. Using it unconsciously may cause discomfort or injury to the body.
	Do not use near open flames such as stoves, do not smoke while using, and do not use with heating appliances such as electric blankets to avoid causing a fire.
	Do not use immediately after meals to avoid discomfort.
	Do not use after drinking alcohol as it may lead to accidents or injuries.
	Machine is not to be used by more than one person at a time to avoid failure or injury.
	Do not use on bare skin, direct massage of the skin may cause soreness due to the intensity.
	Do not sit down or get up forcibly in the state of legrest up. Do not step on the legrest while in massage mode to avoid accidents or injuries.

## ▶ IMPORTANT SAFETY PRECAUTIONS

- Before use, please carefully read this "Safety Precautions" for correct use.
- The precautions shown here aim to safely and correctly use the product and prevent harm or damage to others.
- In order to indicate the degree of hazard or damage, precautions are divided into "Warning" and "Caution", both of which are important safety-related content, so please observe them.

⚠ WARNING	If used incorrectly, it is presumed that there is a potential risk of injury to the user.
⚠ ATTENTION	If used incorrectly, it is presumed that there is a potential for injury to the user or destruction of the item.

### Illustration Example

⚠	△ Symbols indicate content with warnings, cautions. (The example at left indicates general warnings and cautions)
⊘	⊘ The symbol indicates the prohibited behavior. Specific instructions are shown in the figure. (Example: disassembly is prohibited in the left figure)
➡	● The symbols indicate what is mandatory or indicated. Specific instructions are shown in the figure. (Example: unplugging from the power outlet is shown on the left)

After reading, please keep it in a safe place where you can access it at any time.

### Persons unsuitable for use of this product:

 
If you have any of the following symptoms, please consult your doctor and use only under medical supervision.

### ⚠ WARNING

⚠	<ul style="list-style-type: none"> <li>• Those who use medical electronic devices such as pacemakers that are in the human body.</li> <li>• Those who are being treated by a doctor.</li> <li>• Patients with malignant tumors, acute diseases, heart disease, severe hypertension, etc. (supervision is required).</li> <li>• Pregnant women or those who are on their period.</li> <li>• People with osteoporosis and patients with vertebral fractures.</li> <li>• People with skin trauma who need quiet recuperation.</li> <li>• People with a body temperature above 100 degrees (fever).</li> <li>• The product is heated, and care must be taken by users who are not sensitive to heat (supervision is required).</li> <li>• Mentally handicapped persons or minors must be used under supervision while in use.</li> </ul>
---	--


## PARTS

### EXTERIOR STRUCTURE

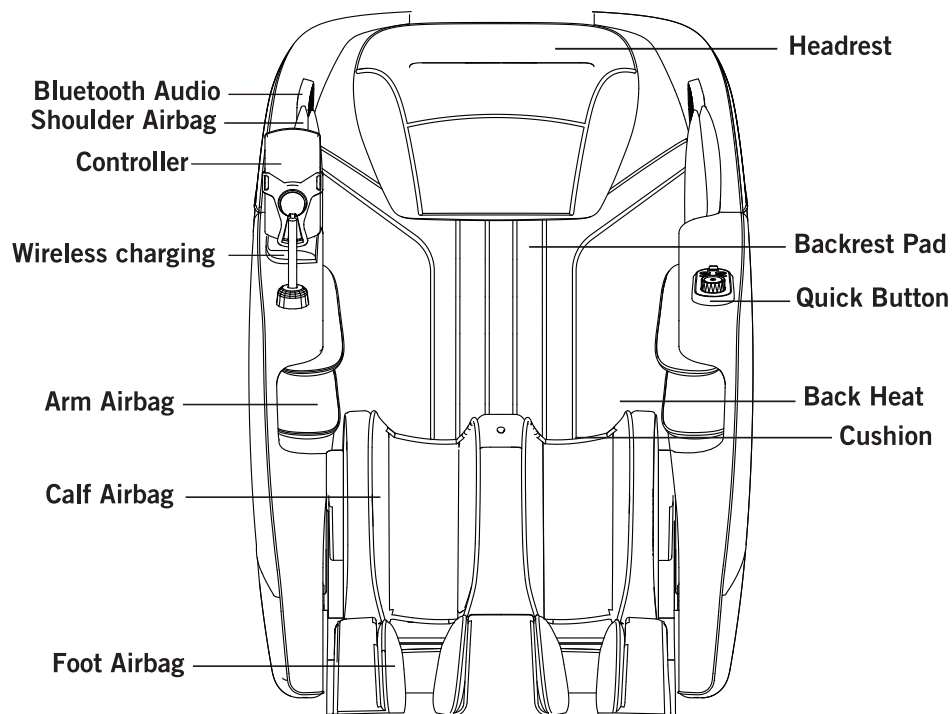

## MESSAGE CHAIR OPERATION
 
### ARMREST CONTROLLER

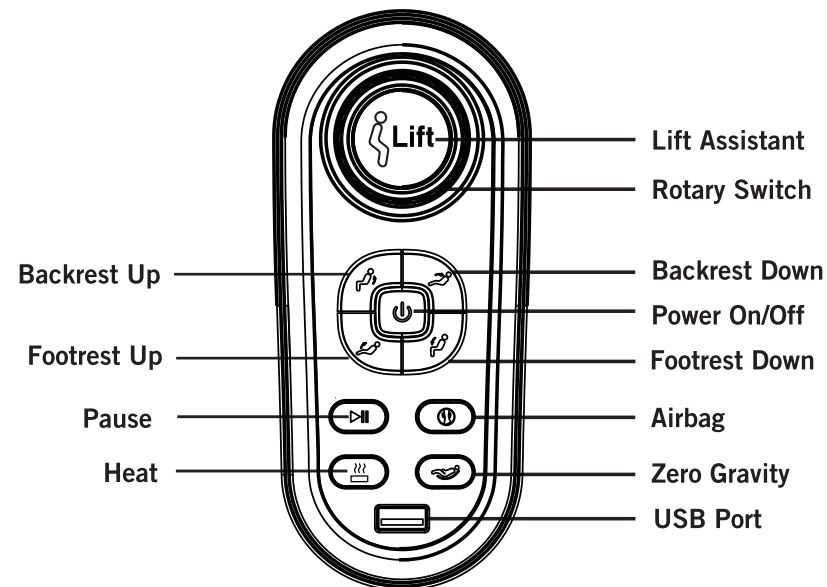

#### Lift Assistant

- ▶ Long Press this button to raise the chair to a standing position.
- ▶ Press the Power button to restore chair to original position.



#### Rotary Switch

- ▶ Rotate this switch clockwise to being auto programs.
- ▶ Rotate this switch counterclockwise to being auto programs in reverse.



#### Backrest Up

- ▶ Press and hold to raise the backrest to upright position.
- ▶ Release button to stop.



#### Backrest Down

- ▶ Press and hold to recline the backrest.
- ▶ Release button to stop



## ▶ MESSAGE CHAIR OPERATION



### Power On/Off

- ▶ Press and hold to turn on the chair. Chair will be in auto massage program.
- ▶ When powered on long press to turn off the massage chair.
- ▶ After chair is restored to original position it can be started again.



### Footrest Up

- ▶ Press and hold to raise the footrest.
- ▶ Release button to stop.



### Footrest Down

- ▶ Press and hold to lower the footrest.
- ▶ Release button to stop.



### Pause Button

- ▶ Press to stop all massage functions.
- ▶ Press again to resume massage.



### Airbag

- ▶ Press in power on mode to start airbags.
- ▶ Press again to stop airbags.



### Heat

- ▶ Press in power on mode to turn heat on.
- ▶ Press again to turn heat off.



### Zero Gravity

- ▶ Press in power on mode to turn on zero gravity one.
- ▶ Press again to turn on zero gravity two mode.

 


### USB Port


- ▶ Plug a USB cable into this interface to begin charging phone.

## ▶ MESSAGE CHAIR OPERATION


### MAIN CONTROLLER

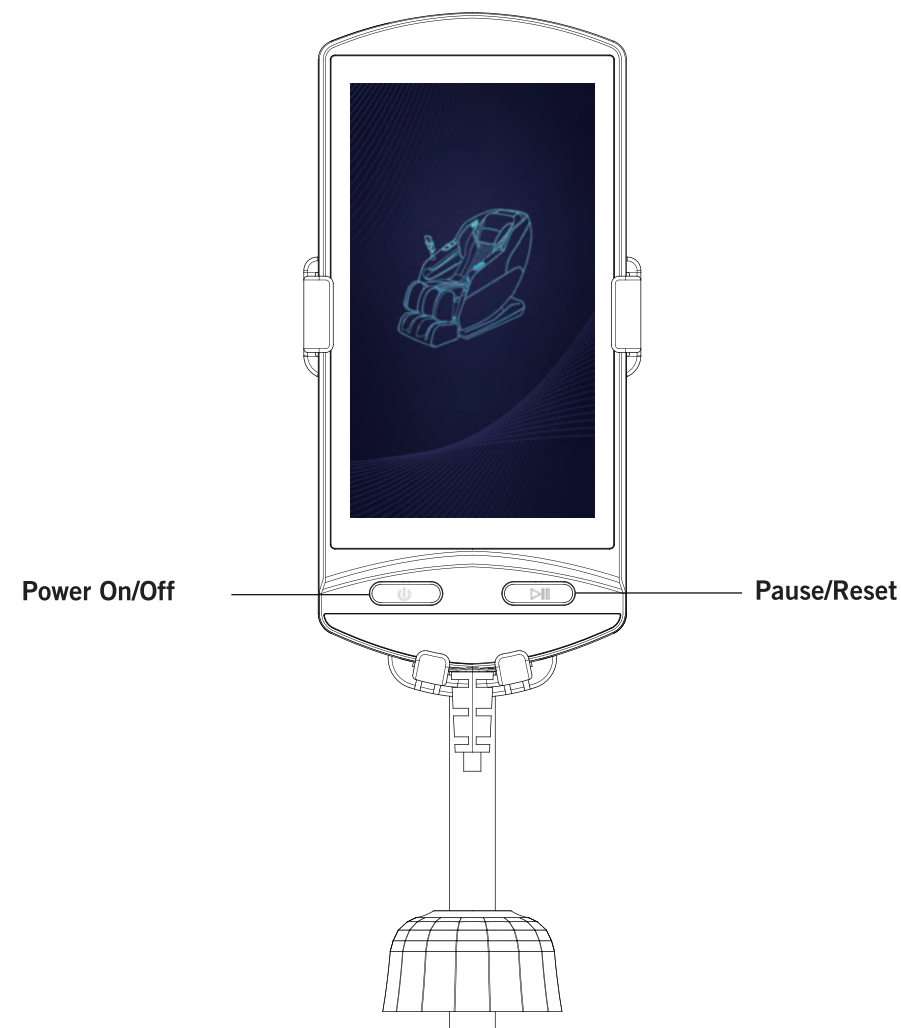

## ► MESSAGE CHAIR OPERATION

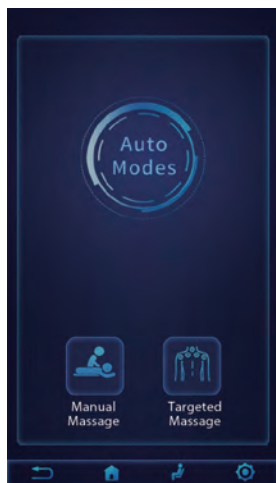 


Main interface.

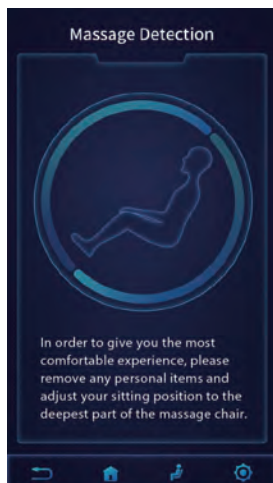 


After massage is selected the body scan will being.



 
Note: Please sit as far back in the seat as possible with your head on the pillow during the scanning.

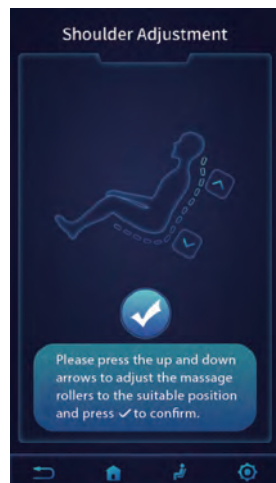

 The position of the movement can be adjusted manually.



   Press this key to access the 12 automatic program selection pages.

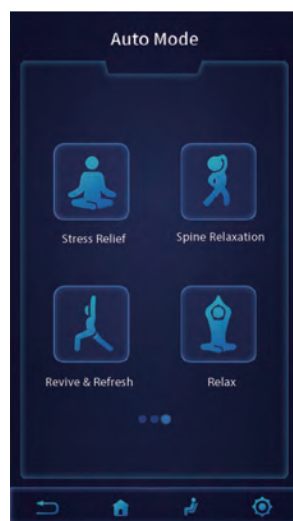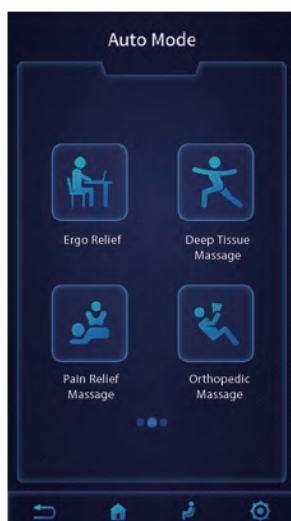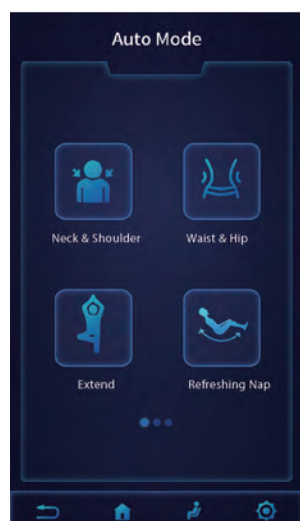

## ► MESSAGE CHAIR OPERATION



Automatic program default 15 minutes and real-time display of movement position, massage technique, currently selected automatic program, heating state, air bag massage position, movement ejection gear position.

 
1. Airbag strength adjustment key, press this key, 1-3 gears cycle in sequence.
2. Adjust movement intensity from 1-3 gears.
3. Turn on/off heating function.

## ► MESSAGE CHAIR OPERATION



This page displays massage techniques, there are a total of 6 massage techniques, select one.

Massage techniques are: Kneading, Knocking, Dual Tap, Shiatsu, Tapping, Sync.

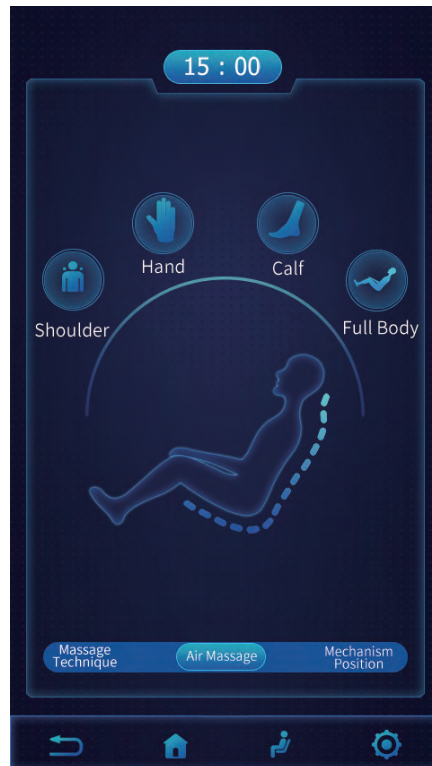

This page displays air pressure massage, you can choose the part you would like to massage.

Parts to choose from are: Shoulder, Hand, Calf, Full Body.

## ► MESSAGE CHAIR OPERATION

 


This page displays the massage rollers position, you can choose where you would like to massage.


1. Range massage: make the movement operate in a certain interval.
2. Fixed Point massage: make the movement fixed at a certain place for operation.
3. Full body massage: make the movement operate in the whole body.
4. Width Adjustment: Adjust the massage width of the movement. Under the massage techniques of tapping, tapping, acupuncture and tapping, you can choose the middle - narrow - wide position for adjustment.

## ▶ MESSAGE CHAIR OPERATION

This page is the Targeted Massage, you can choose from: neck and shoulder massage, lumbar massage, hand massage, and hip massage.

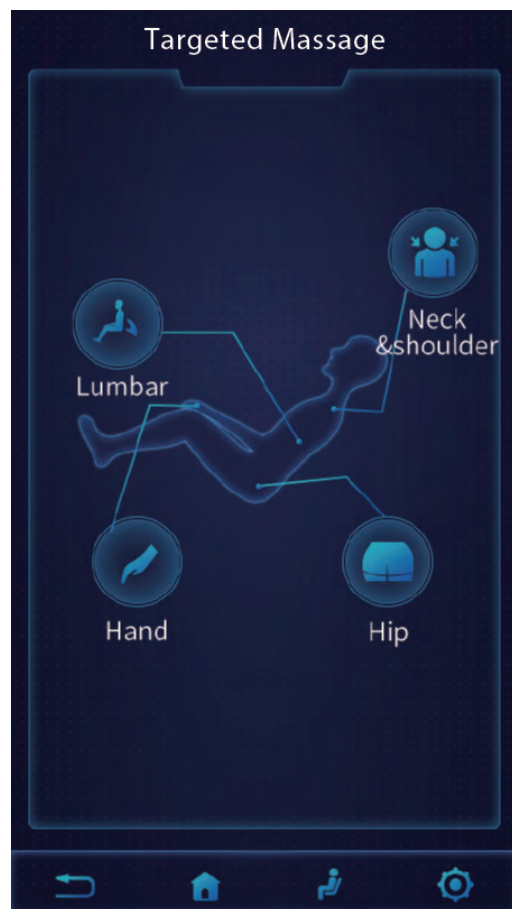

 This button is for neck and shoulder massage.



This button is for hand massage, air pressure massage for the arm only.




This button is for lumbar massage, only for the waist and back massage.



This button is for hip massage, only the glutes area is massaged.

## ▶ MESSAGE CHAIR OPERATION

 This page is the positioning control page.

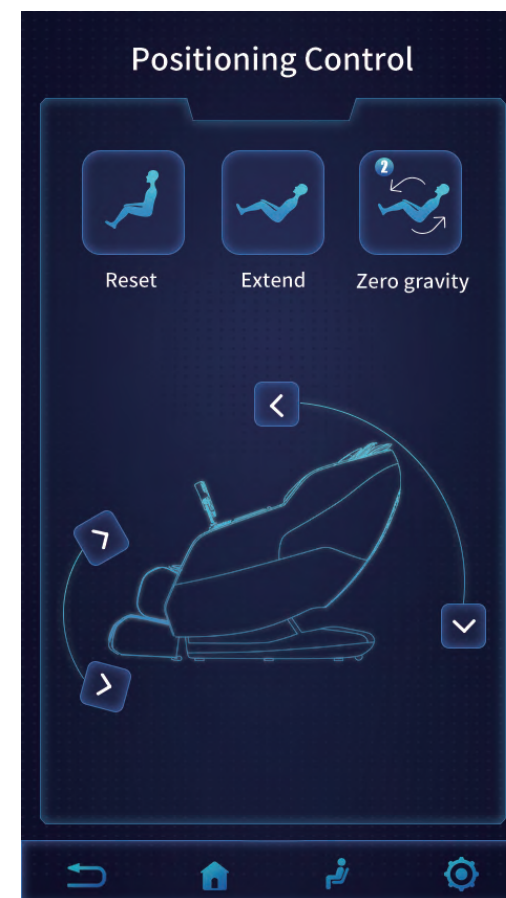


This is the reset angle.



This is the extend angle.



 
This is zero gravity angle adjustment, 1-2 gear can be adjusted.

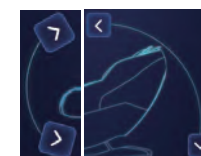

Press and hold each of the 4 keys and you can respectively control the backrest lift and calfrest lift.




## ▶ MESSAGE CHAIR OPERATION

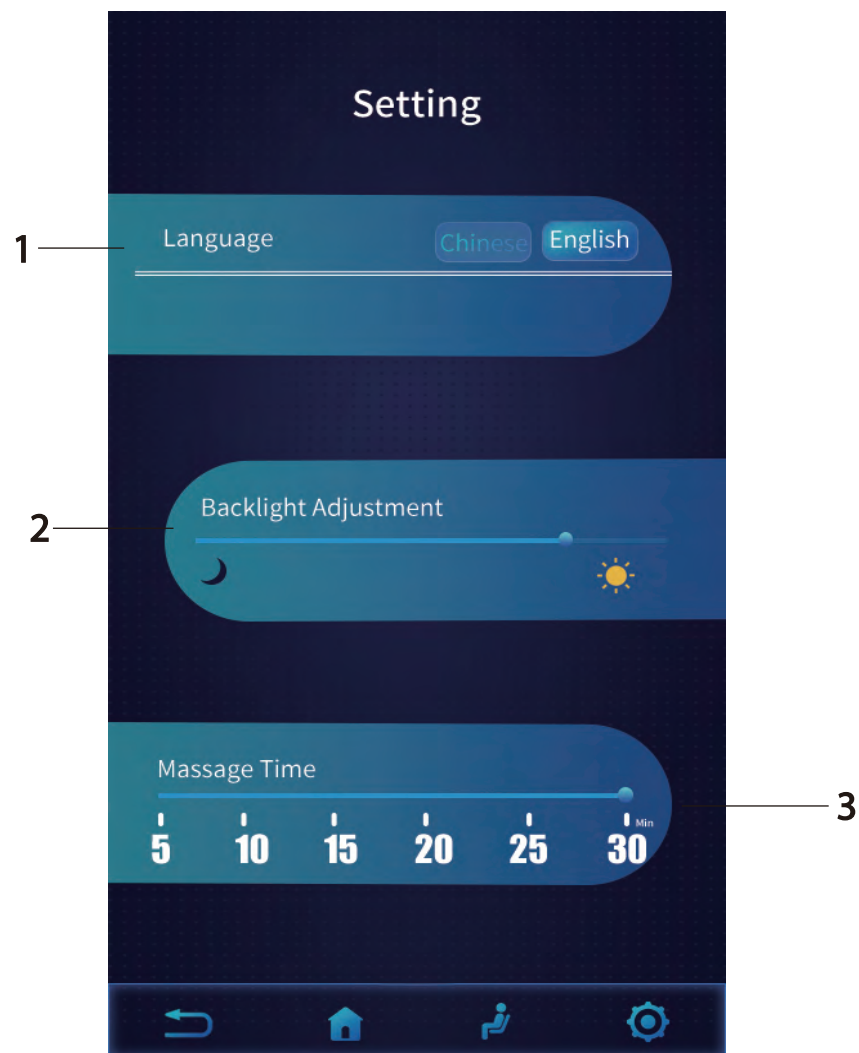 

This page is the Settings page.

1. Language selection, switch to Chinese/English.
2. Backlight adjustment, screen brightness 1-5 can be adjusted.
3. Massage time, can be set to 5/10/15/20/25/30 minutes.


## ▶ MESSAGE CHAIR OPERATION

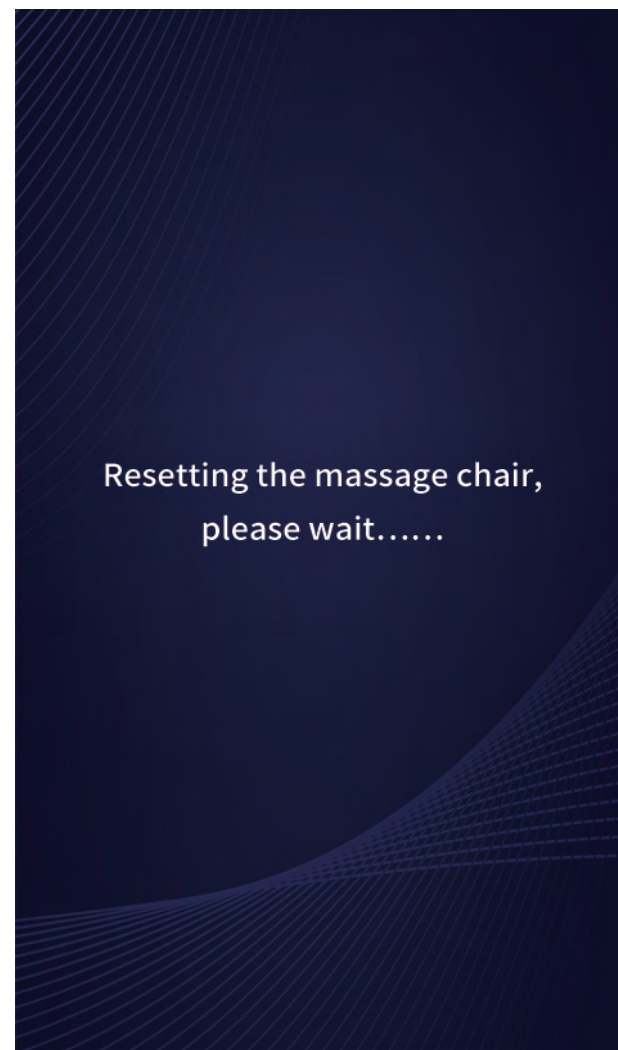 

This page is: Resetting the message chair, please wait...

## ▶ ADDITIONAL FEATURES

 
### WIRELESS CHARGING

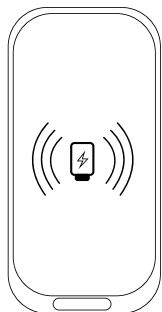

Input Power	<15W
Input Voltage	DC24V
Maximum Output Power	
10W	

The wireless charging is compatible with the latest WPC Qi V1.2.4 standard, supporting 5W, Apple 7.5W, Samsung 10W charging. The maximum input power supported is 15W. Supports QC2.0, QC3.0, AFC, PD3.0 input requests.

### BLUETOOTH CONNECTION METHOD

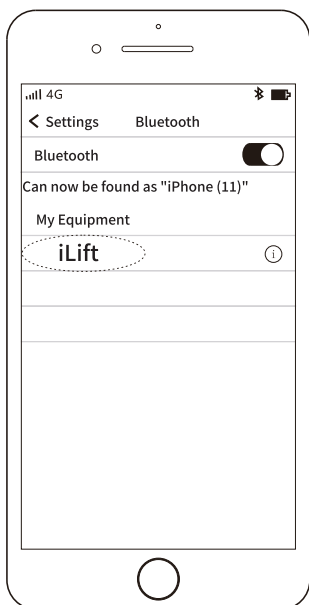 

- Step 1: Turn on the power switch of the massage chair.
- Step 2: Turn on your phone's Bluetooth and search for Bluetooth devices.
- Step 3: After the search, find the chair under "Bluetooth devices" to connect.
- Step 4: Open your phone music playing software to play music.

#### TIPS

- ▶ Different systems of cell phones, Bluetooth connection varies, please connect Bluetooth according to the connection method of different cell phones.

 
## ▶ SETUP

### MESSAGE CHAIR PLACEMENT

Space should be left around the perimeter and placed on a flat part.

TIP: put down the backrest when the legs are raised at the same time, in order to avoid collisions should first set aside more than 7.4 in. in front, at least 3.1 in. of space at the back.

TIP: It is recommended to lay a floor mat under the massage chair to avoid damage to the floor or carpet. Avoid placing in the position of long exposure to sunlight, heating equipment and other high-temperature places in the vicinity to avoid discoloration or deterioration of the leather cover.

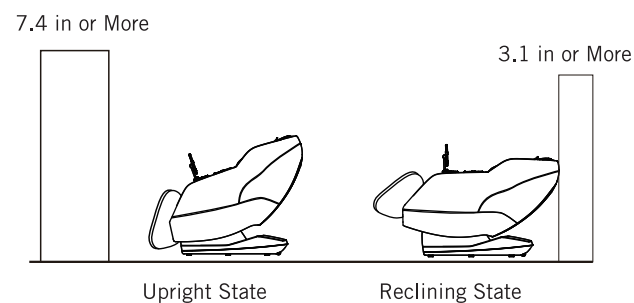


### MESSAGE CHAIR MOVING METHOD

Lift the front of the massage chair and push to move by hand.

#### ATTENTION:

 
- ▶ Do not move with cargo and goods to avoid tipping over.
- ▶ Do not slide or drag casters on floors that are prone to scratching.
- ▶ Do not lift the seat part and legs when moving.

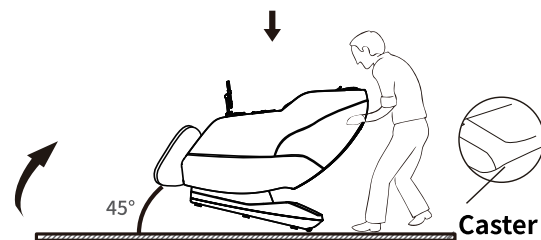

## ► SETUP

Remove the massage chair and accessories from the box.
 
### Massage Chair

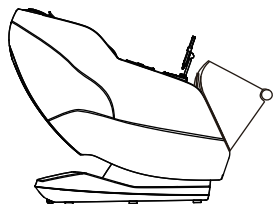

### Accessories

#### Controller



 
#### Instruction Manual and Power Cord




#### TIP:

Accessories are in special packages.  
Please use the accessories in the package.

Installation steps before the use of the chair


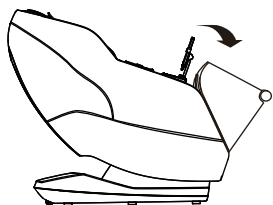


 1. Lower the legrest.

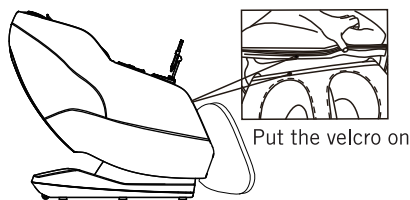

2. Lower the legrest and stick the velcro in place.  
(Lift the legrest to see)

  Hand Controller Installation Method

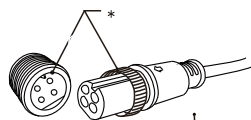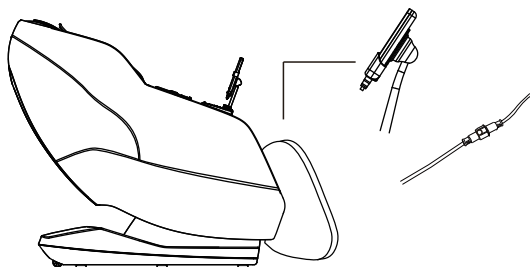

Anti-loosening Plastic Screw Cap  
\* After the hand control docking is completed then screw on the anti-loosening plastic screw cap (clockwise tightening, counterclockwise for loosening).

## ► SETUP

### BEFORE USING THE CHAIR FOR THE FIRST TIME

Turn on the power

1. Before use, confirm whether the voltage marked on the power cord meets the local conditions of use, and the power socket end needs to have a grounding wire.

2. Turn on the power switch

The power switch is located at the bottom of the back.

After the power is turned on, the switch indicator lights up.

#### TIPS

If you are using the massage chair in a cold space, please do not suddenly increase the room temperature, we recommend that you gradually increase the temperature to normal levels. If the massage chair is placed in a cold place and moved to a warm place, we recommend that you use it only after an hour of movement, if used directly, this will cause the massage chair to malfunction.

### BEFORE POWERING ON THE CHAIR

1. Confirm the surrounding area

 
Confirm that there is no one, no pets, no objects around the back of the massage chair and the front and bottom of the legs, etc. (standby position).

2. Confirm the massage chair status

Before use, please lift the back cushion to confirm whether the backrest parts and other parts of the fabric is broken, such as broken (no matter how small the damage) please stop using in time, unplug the power supply, commissioned repair.

Check whether the power cord, hand controller cord or items are caught in the massage chair.

Make sure to insert the power plug completely into the power outlet, and do not allow metal or dust to be adsorbed on the power plug, so as not to cause electric shock or short circuit.

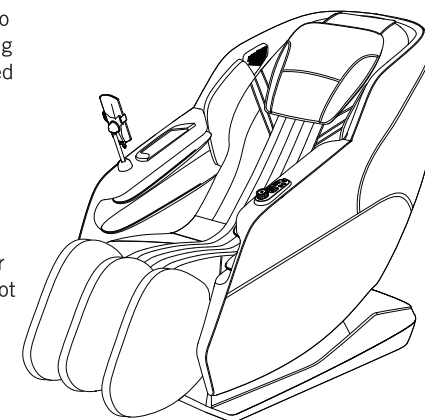



## ▶ PRODUCT STORAGE AND MAINTENANCE

### CLEANING

- ▶ Before cleaning, switch OFF power and remove the power plug from the wall outlet.
- ▶ Dip a soft, cotton cloth in neutral detergent and wring dry. Use it to wipe the pillow cushion, back cushion, armrests, legrests, and any plastic parts of the chair.
- ▶ Use a piece of wet cloth (without detergent) to re-wipe the pillow cushion and back cushion.
- ▶ Use a soft, dry cloth to re-wipe the armrests, legrests, and any plastic parts of the chair.
- ▶ Use a soft, dry cloth to wipe the controller, and the power supply box.
- ▶ To clean the foot/calf unit covers, remove them from the chair, hand wash with mild detergent and hang dry.

#### CAUTION

- ▶ Before any maintenance, always disconnect the power plug from the wall outlet.
- ▶ To avoid electric shock, never touch the power plug with wet hands.
- ▶ When cleaning the back cover of the massage chair, do not allow any detergent to seep into the power supply box.
- ▶ Do not use abrasive chemicals, such as benzene or alcohol, to clean this chair. Damage to the chair may result.
- ▶ Do not apply an iron or any other heated device to the chair.

### STORAGE

When not in use, be sure to switch off power and detach the power plug from the wall outlet. Before putting into storage, wipe off all accumulated dirt and dust from the surface of the chair. Cover the entire surface of the chair with a dust cover (not included).

#### CAUTION

- ▶ Do not store the product under direct sunlight, nor in a location with high temperatures. Doing so may cause the upholstery to fade.
- ▶ Do not allow massage chair to remain in contact with vinyl or wallpaper for extended periods of time as this could lead to discoloration.

### MAINTENANCE

Upon detecting any of the following conditions during daily use, immediately turn off power, disconnect the power plug from the wall outlet, and contact an authorized repairman:

- ▶ A burning smell
- ▶ The power cord feels hot
- ▶ Any other abnormal functioning
- ▶ The cord is plugged in and the power switch flipped on, but no functions operate

## ▶ TROUBLESHOOTING & PRODUCT SPECIFICATIONS

### TROUBLESHOOTING

Problem	Solution
Sound Made During Operation.	The sound emitted by the design of the structure has no effect on the function.
Plugged into the power supply, but the massage chair can not operate.	1. Check whether the power plug is plugged in or whether the power is on. 2. Check whether the power switch button on the massage chair in the "I" position. 3. When in the "I" position, the switch light will turn red, if not lit, please unplug the power cord, check the fuse holder, fuse tube is intact.
During use, the controller can be operated, but the massage chair cannot be operated.	After a long period of operation, massage chair machine temperature is too high, massage chair will automatically be in a temperature protection state, please turn off the power and temporary use of 30 to 50 minutes to allow the internal heat dissipation of the machine.
During use, the controller can be operated and the massage chair stops operating.	After the automatic timer function is activated, if the set time is up, please press the button again to control it.

If problems persist after applying the suggestions above, turn off power and remove the power plug from the wall outlet. Then contact the manufacturer for maintenance and repair.

#### IMPORTANT

Do not attempt to dismantle or repair the chair by yourself. Doing so will void the warranty and U.S. Jaclean, Inc. will not bear any responsibility for any subsequent consequences.

### PRODUCT SPECS

Product Name: ILift

Product Model: ILT-1

Rated Voltage: 110-120V~

Rated Frequency: 50-60Hz

Rated Power: 150W

Rated Time: 15 Min